

FOR USE BY TRAINED OPERATIVES ONLY!

WARNINGS



3. IF SOLUTION IS SPLASHED ONTO YOUR SKIN RINSE IMMEDIATELY WITH COLD WATER. IF SOLUTION IS SPLASHED INTO YOUR EYES FLUSH IMMEDIATELY WITH COLD WATER. OBTAIN MEDICAL ATTENTION IF IRRITATION PERSISTS.

SAFETY



1. The Decarbonizer System



2. For use by trained operatives ONLY

 


3. ALWAYS wear gauntlets and goggles at all times when using the Decarbonizer



4. NEVER immerse gauntlets lower than wrist level


OPERATING INSTRUCTIONS

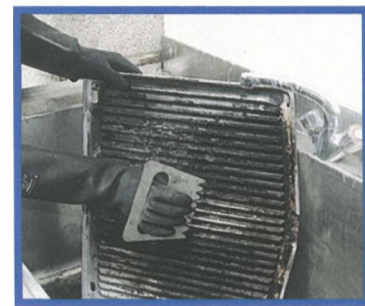

1. Remove any food debris before immersing grill plates



 
2. Ensure stay arm is in lock position before loading the Decarbonizer

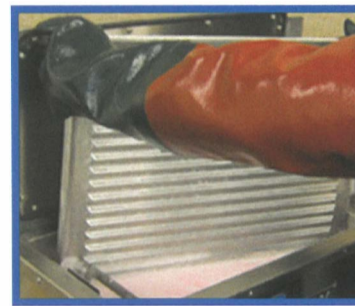

3. Gently immerse grill plates into the Decarbonizer by hand



 4. Light items - raise, load and lower the basket, ensuring it is fully submerged

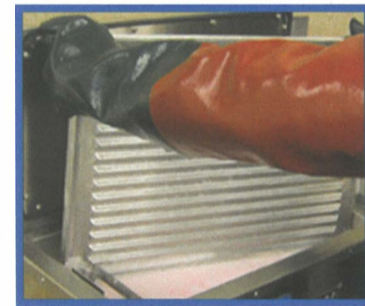


5. Once clean, ensure you remove grill plates before raising internal basket



6. If an item becomes stuck or the basket becomes jammed PHONE VACLensa



 7. Once utensils have been cleaned, rinse them in warm soapy water

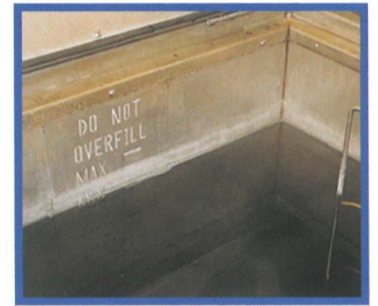

8. Keep topped up with warm water. Do not fill beyond maximum level

NEVER



1. NEVER unplug the Decarbonizer, except in the case of electrical emergency



2. NEVER attempt to move the Decarbonizer



3. NEVER immerse Silver, Tin or Non Stick utensils into the Decarbonizer



4. NEVER add any other cleaning agent to the Decarbonizer

IMPORTANT INFORMATION - PLEASE READ CAREFULLY

- The Decarbonizer system is to be used by trained operators only and must always be plugged in to ensure it maintains its operating temperature of approximately 80°C (except in the case of electrical emergency).
- Ensure that operators are properly trained in the safe use of the Decarbonizer system, thus avoiding unnecessary accidents.
- Operators must wear Vaclensa Protective Gauntlets and Safety Goggles at all times when using the Decarbonizer system.
- Items to be cleaned should be placed into the internal basket and lowered carefully into the tank. When loading grill plates ensure the basket is left in the lowered position and insert by hand. The recommended maximum weight for normal handling when lifting the internal basket is 16kg for women and 25kg for men. DO NOT exceed this limit.
- The basket must always be kept inside the Decarbonizer tank and the basket hooks must always be used when raising the basket.
- Take care when lifting the internal basket to ensure that hot water cannot flow out of the equipment and onto the user.
- Never immerse gauntlets deeper than wrist level to avoid water entering the gauntlet.
- Ensure all items are thoroughly rinsed in hot soapy water before re-use.
- The Decarbonizer system cleans Aluminium, Stainless Steel or Cast Iron. Do not put Silver, Tin or non-stick items into the Decarbonizer.
- The Decarbonizer must always be situated in an area with good lighting, adequate headroom and sufficient space to access the system safely.
- The Decarbonizer must only be drained to a foul water drain.

TROUBLE SHOOTING

- Take care when loading the Decarbonizer to ensure that items do not become jammed in or around the internal basket.
- If an item should become stuck in the Decarbonizer, such that either the basket will not lift up or an item cannot be pulled out of the basket, it must be reported IMMEDIATELY to Vaclensa. DO NOT attempt to remove the basket or item.
- The internal basket must be maintained in good working order - any faults must be reported to Vaclensa IMMEDIATELY so that a damaged internal basket can be repaired or replaced.

SOAK TIMES

Cleaning times vary dependent upon the level of soiling. As a guide, lightly soiled items require between 1-4 hours cleaning time, whereas heavily soiled items require 8-12 hours cleaning time.

SOAK TIMES

ITEM	TIME	FREQUENCY
Grill Plates	8 - 12 hours	Daily
Extraction Filters	2 - 4 hours	Daily
Pots & Pans	2 - 4 hours	As Required
Cooker Tops	2 - 4 hours	As Required
Oven Fittings	2 - 4 hours	As Required



CAUTION - HOT WATER 65°C

