

SAFETY



The Decarbonizer System



For use by trained operatives ONLY



ALWAYS wear gauntlets and goggles at all times when using the Decarbonizer



NEVER immerse gauntlets lower than wrist level

OPERATING INSTRUCTIONS



Remove any food debris before immersing grill plates



Ensure stay arm is in lock position before loading the Decarbonizer



Gently immerse grill plates into the Decarbonizer by hand



Light Items - raise, load and lower the basket, ensuring it is fully submerged



Once clean, ensure you remove grill plates before raising internal basket



If an Item becomes stuck or the basket becomes jammed PHONE VACLensa



Once utensils have been cleaned, rinse them in warm soapy water.



Keep topped up with warm water. Do not fill beyond maximum level

WARNING



NEVER unplug the Decarbonizer - it must remain plugged in at all times



NEVER attempt to move the Decarbonizer



NEVER immerse Silver, Tin or Non Stick utensils into the Decarbonizer



NEVER add any other cleaning agent to the Decarbonizer

Soak Times

ITEM	TIME	FREQUENCY
Grill Plates	8-12 hours	Daily
Extraction Filters	2-4 hours	Daily
Pots & Pans	2-4 hours	As Required
Cooker Tops	2-4 hours	As Required
Oven Fittings	2-4 hours	As Required

Safety Precautions



If solution is splashed onto your skin rinse immediately with cold water. If solution is splashed into your eyes flush immediately with cold water. Obtain medical attention if irritation persists.

PPE



ALWAYS wear the protective gauntlets and safety goggles supplied at all times when using the Decarbonizer system.